



Print a different first or last page

How do I?	Steps to perform
Use different paper and print covers	<ol style="list-style-type: none">1 Open the printer driver, and click the Paper/Quality tab.2 In the Paper Options area, click Use Different Paper/Covers.3 Select an option to print a blank or preprinted front cover, back cover, or both. -or- Select an option to print the first or last page on different paper.4 Select options from the Source is and Type is drop-down lists.5 Click OK.6 Click OK on the Paper/Quality tab. 

