


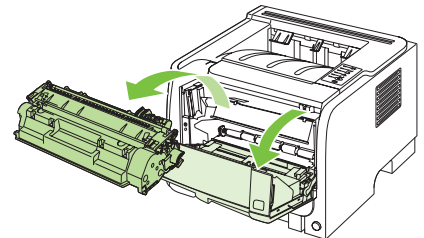


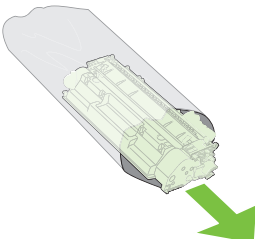


## Replace print cartridges

How do I?	Steps to perform
<p data-bbox="86 375 430 411">Replace print cartridges</p> <p data-bbox="86 1157 693 1212"><b>CAUTION:</b> Do not touch the shutter or the surface of the roller.</p>	<ol data-bbox="716 343 1323 1212" style="list-style-type: none"><li data-bbox="716 343 1323 399">1 Push the button to open the print-cartridge door, and then remove the print cartridge.</li><li data-bbox="716 614 1323 670">2 Remove the new print cartridge from the bag. Place the used print cartridge in the bag for recycling.</li><li data-bbox="716 885 1323 997">3 Bend the tab on the left side of the cartridge until the tab breaks loose. Pull the tab until all the tape is removed from the cartridge. Place the tab and tape in the print-cartridge box to return for recycling.</li><li data-bbox="716 1157 1323 1212">4 Grasp both sides of the print cartridge and distribute the toner by gently rocking the print cartridge.</li></ol>    

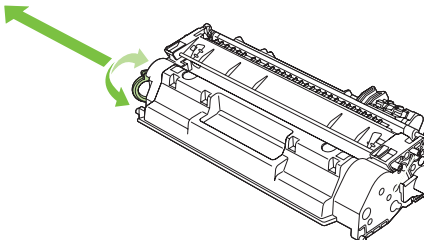

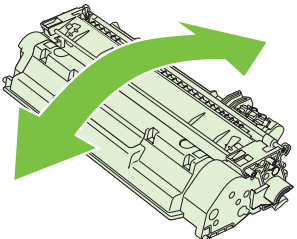

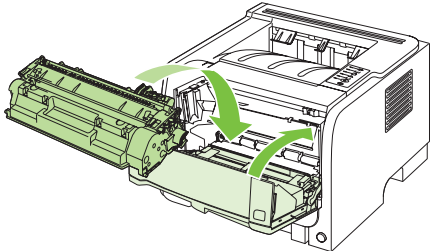How do I?	Steps to perform
Replace print cartridges (continued)	<p data-bbox="730 272 1283 352"><b>5</b> Align the print cartridge with the tracks inside the product, insert the print cartridge until it is firmly seated, and then close the print-cartridge door.</p>  <p data-bbox="730 580 1335 660"><b>6</b> Installation is complete. Place the used print cartridge in the box in which the new cartridge arrived. See the enclosed recycling guide for recycling instructions.</p>

